

Vane probe thermo-anemometer LV 101 - LV 107 - LV 110



"Select" key

See table

"Functions available from main screen"

"Function" key

1x : "Hold" : measure holding

2x : "Min/Max" : display of minimum and maximum values from **channel 1** since last request.

3x : "Min/Max" : display of minimum and maximum values from **channel 2** since last request.

4x : **Back** to held measure.

"On / off" key

ON : Switch-on

OFF : Switch-off

Escape : Return to previous screen

"Backlight" key

1x  Level 1

2x  Level 2

3x  No backlight

Functions available from VELOCITY main screen

| | LV101 | LV107 | LV110 | |
|--------------------------------|-------|-------|-------|--|
| Average calculation | 1x | 1x | 1x | Select → OK Start → OK Average value → OK Min/Max values |
| Select cone | 2x | | | Select → OK → Press Select to scroll down cone list then validate with OK, Airflow screen is displayed (LV101). Select → OK Airflow screen is displayed (LV110). |
| ∅ of circular area | 3x | 2x | 3x | Select → OK → Press Select to select "Circ." and press OK ↳ Enter diameter with Select ⇒ Validate with OK, airflow screen is displayed. |
| Dimensions of rectangular area | 3x | 2x | 3x | Select → OK → Press Select to select "Rect." and press OK ↳ Enter length with Select ⇒ Validate with OK ↳ Enter width with Select ⇒ Validate with OK, airflow screen is displayed. |
| Select air velocity units | 4x | 3x | 4x | Select → OK → Press sur Select to scroll down units. ⇒ Validate with OK |
| Select temp. units | 5x | 4x | 5x | Select → OK → Press Select to scroll down units. ⇒ Validate with OK |
| Automatic shut-off | 6x | 5x | 6x | Select → OK → Press Select to scroll down minutes. ⇒ Validate with OK |
| Beep | 7x | 6x | 7x | Select → OK → Press Select to activate or to deactivate ⇒ Validate with OK |


Number of key pressing

Functions available from AIR FLOW main screen

| | | |
|-----------------------|----|---|
| Back to velocity menu | 1x | Select → OK → In order to change dimensions or type of side wall vent |
| Select air flow units | 2x | Select → OK → Press Select to scroll down units. ⇒ Validate with OK |
| Select temp. units | 3x | Select → OK → Press Select to scroll down units. ⇒ Validate with OK |
| Automatic shut-off | 4x | Select → OK → Press Select to scroll down minutes. ⇒ Validate with OK |
| Beep | 5x | Select → OK → Press Select to activate or to deactivate. ⇒ Validate with OK |

How to change battery

1. Remove the front part at the back of the instrument
2. Remove old battery
3. Insert the new battery in accordance with proper polarity drew inside the housing.
4. Replace the front.

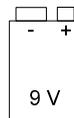

 Once returned to KIMO, required waste collection will be assured in the respect of the environment in accordance to 2002/96/CE guidelines relating to WEEE.

www.kimo.fr

EXPORT DEPARTMENT
Boulevard de Beaubourg - Emerainville - BP 48
77312 MARNE LA VALLEE CEDEX 2
Tel : + 33.1.60.06.69.25 - Fax : + 33.1.60.06.69.29

