


Feed-Thru Instructions



Step 1:
Remove 2.5 - 3.8 cm of jacket.



Step 2:
Remove centre spline (CAT6).

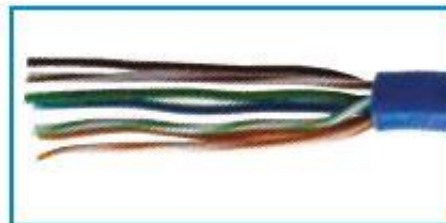

Step 3:
Untwist pairs to jacket base,
and align in order.
Trim ends flat.



Step 4: Slide cable into
connector until fully seated.
Verify wiring order.



Step 5: Place assembly into
FT-45™ tool.
Squeeze handle closed



DONE